HOW TO ADJUST YOUR COACH CHAIR

HEIGHT-AD JUSTABLE ARMRESTS

Use button on side of armrest to adjust height.

IFFTIEVER **7BACK** τ πτ Ος

Move lever forward to release the seat-with-back synchro tilt.

> Move lever back to lock the tilt

CENTRE FRONT KNOB USTMENT

> Turn left to increase seat tilt tension. Turn right to loosen seat tilt tension

ADJUSTABLE LUMBAR SUPPORT

Slide lumbar support up and down as required or slide out to remove completely.

RIGHT | EVER GASLIFT SFAT HEIGHT

When sitting, lift lever to lower the gaslift.

Take your weight off the seat and lift lever to raise the gaslift.

RIGHT LEVER SEAT SLIDE

Lift lever and use your body weight to slide the seat forward or backward.

EDEN

COACH







*Product Certified for Low Chemical Emissions: UL.com/GG UL2818

SEATING POSTURE

We recommend computer users adopt an open-angle sitting position, with knees slightly lower than hips.

Always sit near the back of your seat.

Adjust the lumbar support height so that it fits into the lumbar contour of your back.

Adjust the tilt tension so that when the synchro tilt is released the chair supports your weight in an upright seated position but allows you to lean back easily if you choose.

Sit close to your workstation.

Your feet should be flat on the floor or on a footrest.

Keyboarding and mouse operation should be achieved comfortably without stretching.

WARRANTY

Coach is warrantied for 10 years in normal commercial-use situations.

The recommended maximum user weight is 140kg.

Eden Office accept full responsibility for faulty workmanship and/or mechanical failure. Chair parts will be repaired or replaced free of charge within this period.

Repairs undertaken by any other party, or adjustment or tampering with mechanical parts, could void the warranty.

CHAIR CARE

The **mechanical parts** of your Coach chair require little or no maintenance.

The **castors** should be kept clear of threads or other objects that would inhibit their movement.

The **gaslift** contains pressurised gas and should not be tampered with in any way.

Vacuum regularly. Protect from direct sunlight. Professional cleaning is recommended.

For spot cleaning: Wipe clean with a damp cloth, or shampoo using upholstery shampoo. A mild citrus cleaner may also be used.