

HOW TO ADJUST YOUR CHORUS CHAIR

**AFRDI
CERTIFIED**
FOR USERS UP TO
160KG
MULTI-SHIFT
USE

RATCHET BACK LIFT **BACKREST HEIGHT**

Click backrest upwards
with both hands till
it reaches the
desired height.

(When it reaches the top
of the 8 ratchet positions
it will return to the
bottom of the range.)

REAR
RIGHT LEVER

BACKREST ANGLE

Lift lever to allow
the backrest to tilt.

Lower the lever to
fix the angle.

FRONT
RIGHT LEVER

GASLIFT SEAT HEIGHT

When sitting, lift lever
to lower the gaslift.

Take your weight off the seat
and lift lever to raise the gaslift.

LEFT LEVER **SEAT ANGLE**

Lift lever to allow
the seat to tilt.

Lower the lever to
fix the seat angle.



EDEN

CHORUS 3.50

Keep this for
later reference



10YR 10-YEAR
WARRANTY

160KG RECOMMENDED
MAXIMUM
USER WEIGHT

**AS/NZS 4438:
LEVEL 6** AUSTRALIAN / NZ
STANDARD FOR
COMPUTER CHAIRS*

**160KG
CERTIFIED** AFRDI 142
CERTIFIED
FOR 160KG
MULTI-SHIFT*



GREENGUARD
GOLD CERTIFIED*



100%
Wood from well-
managed forests
FSC® C182102

*AFRDI certified: Chorus 3.50 standard model

*Product Certified for Low Chemical
Emissions: UL.com/GG UL2818

SEATING POSTURE

We recommend computer users adopt an open-angle sitting position, with knees slightly lower than hips.

Always sit near the back of your seat.

Adjust your backrest height so that the lumbar support fits into the lumbar contour of your back.

Adjust your backrest angle, seat angle, and seat height to a position that allows you to sit close to your workstation.

Your feet should be flat on the floor or on a footrest. There should be no pressure under your thighs.

Keyboarding and mouse operation should be achieved comfortably without stretching.

WARRANTY

Chorus 3.50 is warrantied for 10 years in normal commercial-use situations.

The recommended maximum user weight is 160kg.

Eden Office accept full responsibility for faulty workmanship and/or mechanical failure. Chair parts will be repaired or replaced free of charge within this period.

Repairs undertaken by any other party, or adjustment or tampering with mechanical parts, could void the warranty.

CHAIR CARE

The **mechanical parts** of your Chorus chair require little or no maintenance.

The **castors** should be kept clear of threads or other objects that would inhibit their movement.

The **gaslift** contains pressurised gas and should not be tampered with in any way.

The **foam and standard fabric** used in the upholstery of Chorus chairs comply with standard AS/NZS 4088.1:1996.

Vacuum regularly. Protect from direct sunlight. Professional cleaning is recommended.

For spot cleaning: Wipe clean with a damp cloth, or shampoo using upholstery shampoo. A mild citrus cleaner may also be used.