

HOW TO ADJUST YOUR RALLY CHAIR

RATCHET BACK LIFT

BACKREST HEIGHT

Click backrest upwards with both hands till it reaches the desired height.

(When it reaches the top of the 7 ratchet positions it will return to the bottom of the range.)

HANDLE BENEATH SEAT AT RIGHT

SEAT SLIDE

Lift weight off seat and slide seat forward or backward while holding the handle out.

RIGHT LEVER

SEAT/BACK TILT

Pull the lever outward to release the seat/back tilt.

Push the lever in to fix the seat/back position.

RIGHT LEVER

GASLIFT SEAT HEIGHT

When sitting, press lever down to lower the gaslift.

Take your weight off the seat and press lever down to raise the gaslift.

MULTI-ADJUSTABLE ARMRESTS

Use button on outside of armrest to adjust height.

Armrest pad position can be adjusted by sliding back or forward.



CENTRE FRONT KNOB

TILT TENSION ADJUSTMENT

Turn left to increase seat tilt tension.

Turn right to loosen seat tilt tension.

EDEN RALLY



10YR

10-YEAR
WARRANTY

140KG

RECOMMENDED
MAXIMUM
USER WEIGHT



GREENGUARD
GOLD CERTIFIED*

*Product Certified for Low Chemical
Emissions: UL.com/GG UL2818

WARRANTY

Rally is warrantied for 10 years in normal commercial-use situations.

The recommended maximum user weight is 140kg.

Eden Office accept full responsibility for faulty workmanship and/or mechanical failure. Chair parts will be repaired or replaced free of charge within this period.

Repairs undertaken by any other party, or adjustment or tampering with mechanical parts, could void the warranty.

SEATING POSTURE

We recommend computer users adopt an open-angle sitting position, with knees slightly lower than hips.

Always sit near the back of your seat.

Adjust your backrest height so that the lumbar support fits into the lumbar contour of your back.

Adjust the tilt tension so that when the synchro tilt is released the chair supports your weight in an upright seated position but allows you to lean back easily if you choose.

Sit close to your workstation.

Your feet should be flat on the floor or on a footrest.

Keyboarding and mouse operation should be achieved comfortably without stretching.

CHAIR CARE

The **mechanical parts** of your Rally chair require little or no maintenance.

The **castors** should be kept clear of threads or other objects that would inhibit their movement.

The **gaslift** contains pressurised gas and should not be tampered with in any way.

Vacuum regularly. Protect from direct sunlight. Professional cleaning is recommended.

For spot cleaning: Wipe clean with a damp cloth, or shampoo using upholstery shampoo. A mild citrus cleaner may also be used.