

HOW TO ADJUST YOUR TEMPO CHAIR



RATCHET BACK LIFT

BACKREST HEIGHT

Click backrest upwards
with both hands till
it reaches the
desired height.

(When it reaches the top
of the 8 ratchet positions
it will return to the bottom
of the range.)

REAR
RIGHT LEVER

BACKREST ANGLE

Lift lever to allow
the backrest to tilt.

Lower the lever to
fix the angle.

FRONT
RIGHT LEVER

GASLIFT SEAT HEIGHT

When sitting, lift lever
to lower the gaslift.

Take your weight off the seat
and lift lever to raise the gaslift.

EDEN

TEMPO 2.40/2.50

Keep this for
later reference



10YR 10-YEAR
WARRANTY

140KG RECOMMENDED
MAXIMUM
USER WEIGHT



GREENGUARD
GOLD CERTIFIED*



100%
Wood from well-
managed forests
FSC® C182102

*Product Certified for Low Chemical
Emissions: UL.com/GG UL2818

WARRANTY

Tempo is warrantied for 10 years in normal commercial-use situations.

The recommended maximum user weight is 140kg.

Eden Office accept full responsibility for faulty workmanship and/or mechanical failure. Chair parts will be repaired or replaced free of charge within this period.

Repairs undertaken by any other party, or adjustment or tampering with mechanical parts, could void the warranty.

SEATING POSTURE

We recommend computer users adopt an open-angle sitting position, with knees slightly lower than hips.

Always sit near the back of your seat.

Adjust your backrest height so that the lumbar support fits into the lumbar contour of your back.

Adjust your backrest angle and seat height to a position that allows you to sit close to your workstation.

Your feet should be flat on the floor or on a footrest. There should be no pressure under your thighs.

Keyboarding and mouse operation should be achieved comfortably without stretching.

CHAIR CARE

The **mechanical parts** of your Tempo chair require little or no maintenance.

The **castors** should be kept clear of threads or other objects that would inhibit their movement.

The **gaslift** contains pressurised gas and should not be tampered with in any way.

The **foam and standard fabric** used in the upholstery of Tempo chairs comply with standard AS/NZS 4088.1:1996.

Vacuum regularly. Protect from direct sunlight. Professional cleaning is recommended.

For spot cleaning: Wipe clean with a damp cloth, or shampoo using upholstery shampoo. A mild citrus cleaner may also be used.